




Subframe TYLY-0183 used in Seat Cowling Sets:

BPFS-0160, BPFS-0161 and BPFS-0162 for Honda NSR250 MC18




PHOTOS for
REFERENCE on
WIRING

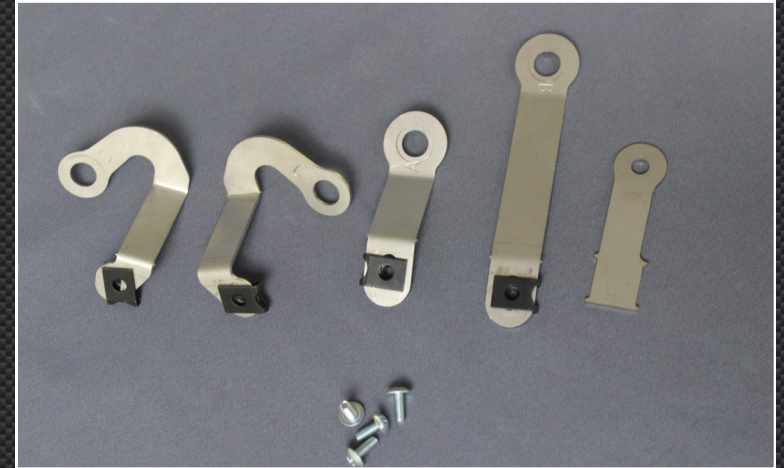


1. Top View right side




2. Top View

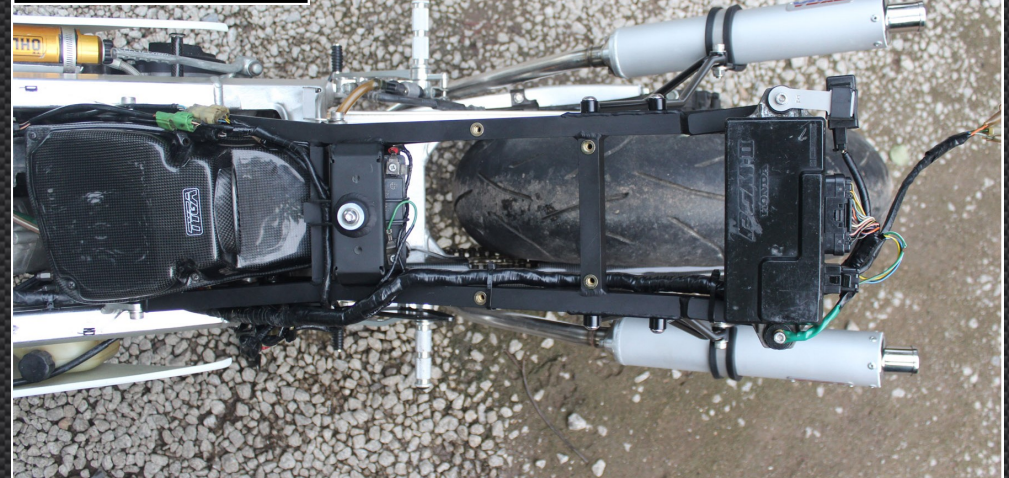


3. Left Side

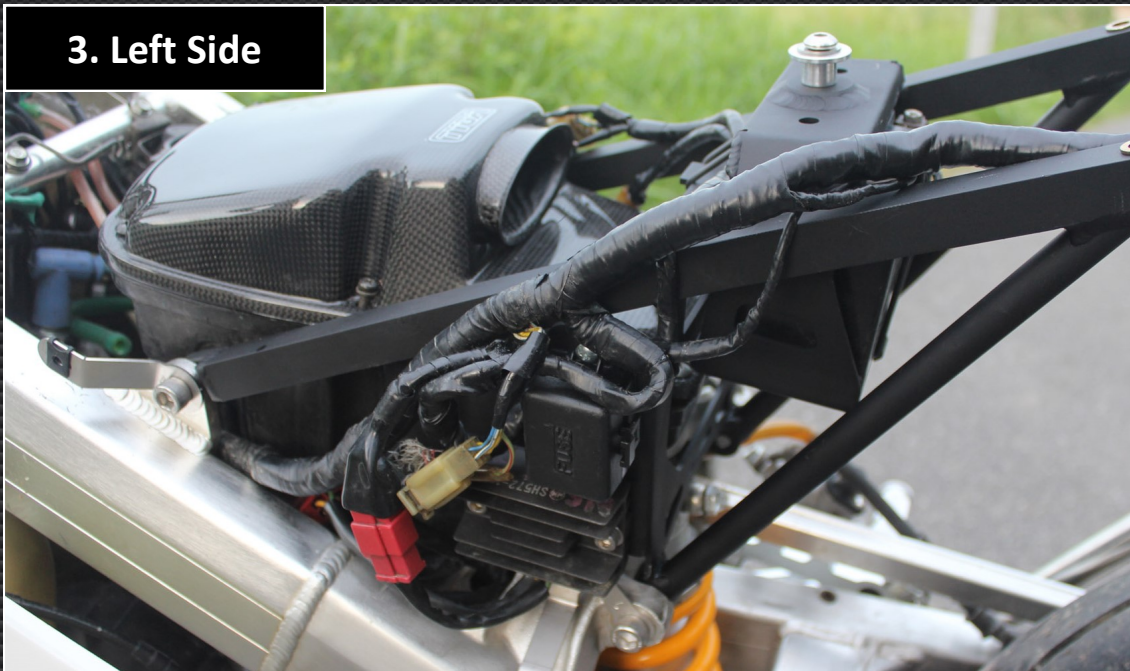

5. Rear (PGM II)

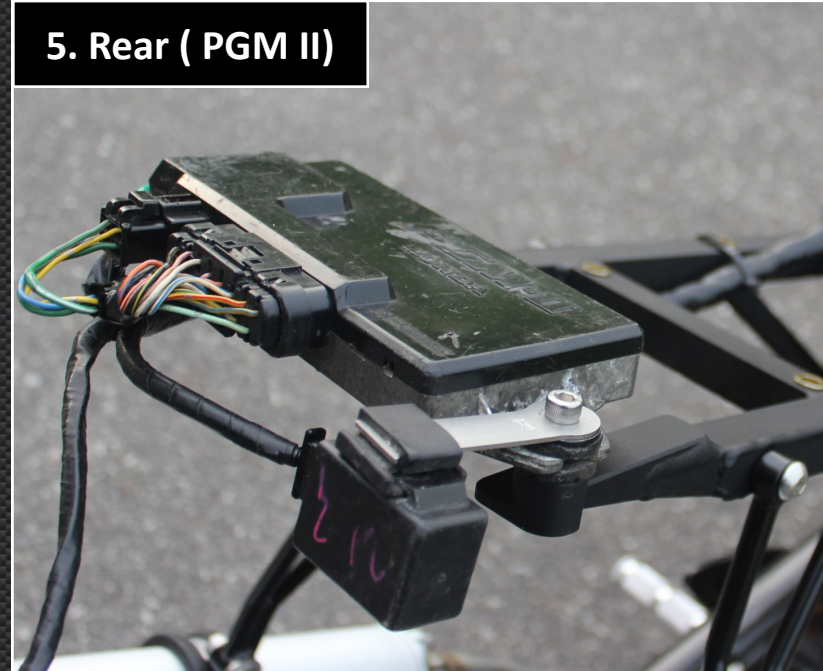

4. Right Side

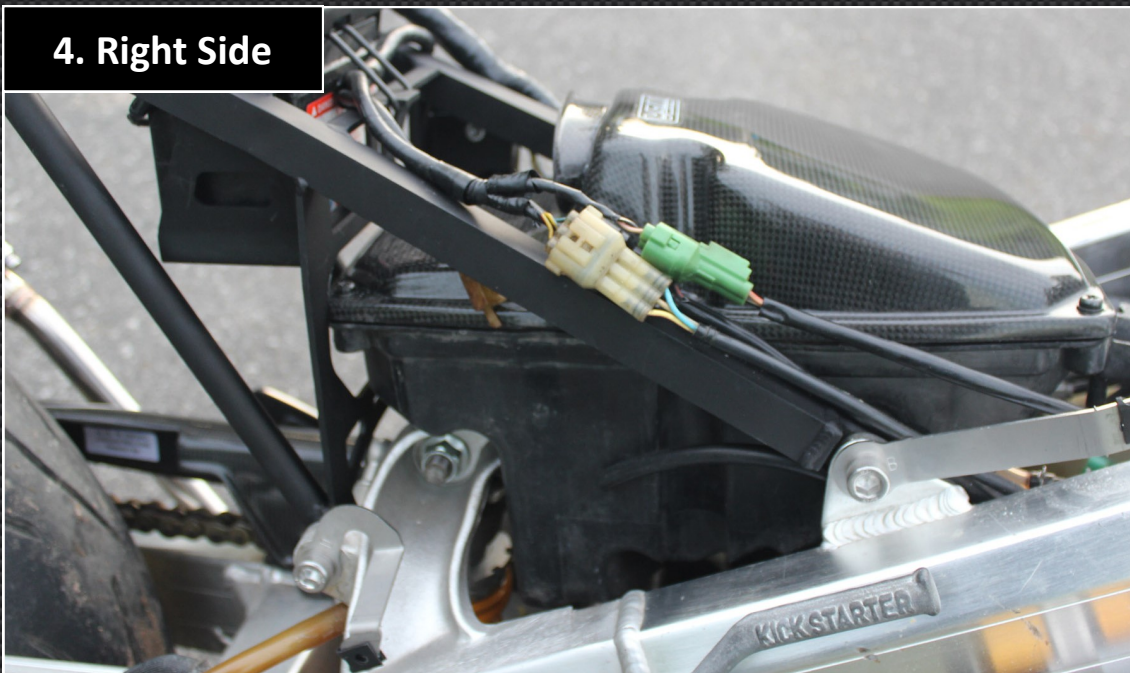

If you are struggling to find a good set up, please contact us and we will do our best to advise you on any problems or issues you may have.



www.tyga-performance.com